

FINISHING POWDERS (for mass finishing)

We have developed a complete range of abrasive or polishing powders including:


- Classic or generic powders
but also:
- Special powders considering their size or composition




Codification of the main products:
ABC WA : white aluminium oxide
ABC A : brown aluminium oxide
ABC SiC : black silicon carbide
ABC SiC G : green silicon carbide
ABC BoC : bovon carbide
ABC CBN : nitron carbide

Thus, we have developed very fine powders whose size may be around a few tens of nanometers.


These powders are used to obtain interesting results when looking for a surface finish of very high quality

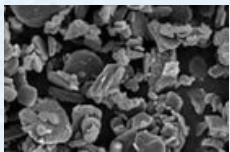

ABC WA800 :
white Aluminium oxide
Adapted for tasks such as
light deburring
and also also for polishing
preparation

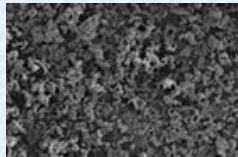

ABC WA2000 :
powder of white Aluminium oxide
Adapted for light polishing
Requires a first step of
preparation for polishing
with a powder such as
ABC WA800 or equivalent

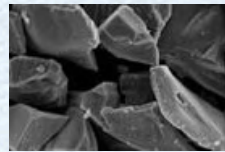

ABC SiC400 :
powder of purified silicon carbide
Adapted for task
of strong deburring

This list is not exhaustive and only lists some commonly available products.

We organize training on these products in order to understand how they work and the correct way to select them according to the objectives, worked materials, compounds and equipment used ...



ABC SwissTech

Switzerland :
Eplatures-grise 17 - CH-2300 La Chaux de Fonds
Tél : +41 76 693 8063
France :
4 rue Bois Soleil – 25500 Morteau
Tél : +33 6.8219.2464
tribofinition@abcswisstech.ch
www.abcswisstech.com

