

ROTARY BARREL

CBARR Compact Model

Rotary barrel is a rotary machine (in opposition to vibrators).


They are the first generation of mass finishing equipment.

They are cheaper, but they are limited due to low speed of rotation.

On the other hand, this type of equipment is very useful for flat pieces when vibrators represent too much inconvenient (sticking).

Technical details of the most frequent equipment:

Model	Capacity (L)	Vol net (L)	Weight (kg)	Inside Size (mm)	Outside Size (mm)
Cbarr-Compact 3	3	1.1	5	100/110x132	230*180*240
Cbarr-Compact 5	5	2.2	6	120/140x173	280*220*290
Cbarr-Compact 2x4	8	3.4	12	125/140x126	298*222*325
Cbarr-Compact 18	18	6	18	155/180x287	570*210*390
Cbarr-Compact 21	21	11	35	182/200x360	665*350*620

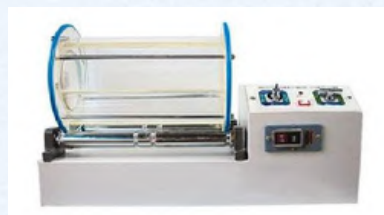

Switzerland :
 Eplatures-grise 17 - CH-2300 La Chaux de Fonds
 Tél : +41 76 693 8063
 France :
 4 rue Bois Soleil – 25500 Morteau
 Tél : +33 6.8219.2464
tribofinition@abcswisstech.ch
www.abcswisstech.com